

ENGLISH
INSTRUCTION MANUAL

Supa RETRON[®] HD

PREMIUM RETRO GAMING CONSOLE FOR SNES & SFC




 **HYPERKIN[®]**
PLAY WELL. LIVE WELL.

www.hyperkin.com

Thank you for purchasing the SupaRetroN® HD Gaming System. For your safety, and the safety of others, please carefully read the instruction manual before using this product.

Setting Up the SupaRetroN® HD

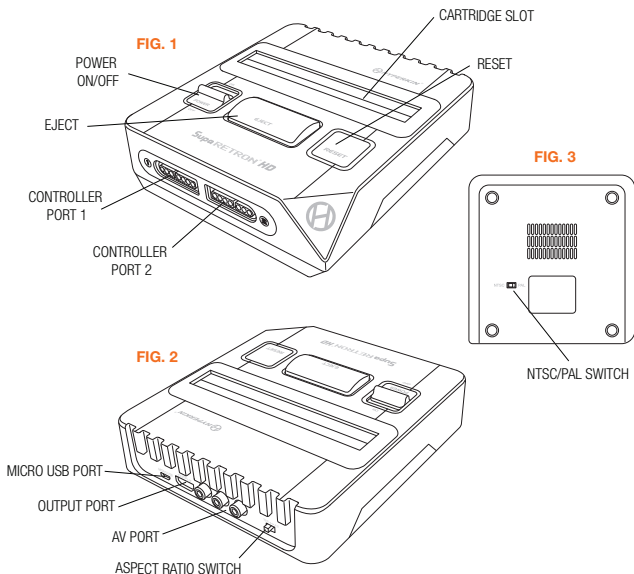

Setting Up the SupaRetroN® HD via HD Cable (FIG.2)

1. Insert the HD cable into the OUTPUT PORT on the SupaRetroN® HD.
2. Insert the other end of the HD cable into the HD input on your HDTV.
3. Insert the MICRO USB CABLE into the MICRO USB PORT on the SupaRetroN® HD.
4. Insert the other end of the MICRO USB CABLE into a power source. If AC adapter is not included, we strongly advise you use a 5 Volt 1 Amp USB wall AC adapter.
5. Plug the AC adapter into a power outlet.

Setting Up the SupaRetroN® HD via AV Cable (FIG.2)

1. Insert the AV cable into the AV PORT on the SupaRetroN® HD.
2. Insert the other end of the AV cable into the AV input on the TV.

Aspect Ratio and the Region Switches

BEFORE powering on your SupaRetroN® HD, make sure your aspect (via HD cable only) and region is configured.

- Located in the BACK (Fig.2) of the SupaRetroN® HD is the ASPECT RATIO SWITCH. Moving the switch to the LEFT position indicates a 16:9 ratio. Moving the switch to the RIGHT position indicates a 4:3 ratio. Aspect ratio can only be toggled when using HD cable.
- Located on the BOTTOM (Fig.3) of the SupaRetroN® HD is the region switch. With the front of the console oriented upwards and the bottom facing you, moving the switch to the LEFT position indicates you are using a NTSC cartridge. Moving the switch to the RIGHT position indicates you are using an PAL cartridge.

Playing SNES and SFC cartridges on the SupaRetroN® HD (FIG.1)

1. Insert the cartridge into the CARTRIDGE SLOT.
2. Turn ON the SupaRetroN® HD by pressing the POWER button. The Hyperkin logo located on the right-hand corner of the console will light up BLUE when powered on.
3. While ON, you can reset the SupaRetroN® HD by pressing the RESET button.
4. When done playing, press the POWER button to turn OFF the SupaRetroN® HD.
5. Lastly, to remove your cartridge safely, press the EJECT button to release the cartridge.

Note: Make sure your aspect ratio and region are configured before powering on the SupaRetroN® HD.

Using the Premium Classic-Style "Scout" Controllers (FIG.1)

With the SupaRetroN® HD turned off, insert a SCOUT into CONTROLLER PORT 1. For two-player games, insert a second SCOUT into CONTROLLER PORT 2. The SupaRetroN® HD is also compatible with original SNES and SNES-compatible controllers.

Please visit www.Hyperkin.com/warranty to register your official Hyperkin product for Hyperkin's Warranty.

© 2018 Hyperkin Inc. Hyperkin® and RetroN® are registered trademarks of Hyperkin Inc. Super NES® and Super Famicom™ are registered trademarks and trademarks, respectively, of Nintendo® of America Inc. This product is not designed, manufactured, sponsored, endorsed, or licensed by Nintendo® of America Inc. in the United States and/or other countries. All rights reserved. Patent Pending. Made in China.

